

Configuration Guide for DWR-730

GETTING STARTED 2 WIFI SETTING 3 MANUAL SETTING



step 1 GETTING STARTED

Open the flap of the router from behind, remove the battery and insert the SIM card. Then switch on the device. By default the Router is in "Auto" mode so the SIMcard gets directly detected and internet will be available without doing any further setting.

In order to access the internet you have to connect to DWR 730 wirelessly. The default wireless settings i.e. Wireless network name and password will provided with the device.

From your wireless device scan for the available wireless networks and connect to the DWR 730 by the default given password provided with the device.





DWM 156 CONFIGURATION GUIDE

step 2 WIFI SETTING


Now in order to change the default Wi-Fi name and Password you will have to Log in to the device. Keeping connected to the device wirelessly,type in your Web Browser 192.168.0.1then the default login page will appear. Type in username: admin and password: (blankdon't enter any thing)





step 2 WIFI SETTING

After you login the default webpage will appear.

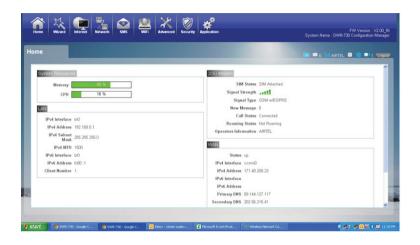



step 2 WIFI SETTING

Then Go to "Wi-Fi"

Now You can give a personalized name that you like to the DWR-730 Wi-Fi by typing in the required name in the section "SSID" and you can give your own password by typing in the required password in the section "Pre-Shared Key" and then click on "Apply".


Now when you do save this setting you will get disconnected from Wi-Fi then you should again scan and connect to the new personalized Wi-Fi network created by you.





step 3 MANUAL SETTING


In case if you are facing issue with auto connection, you can create a manual profile and connect to the manually created network. Go to "Internet"-"Connection". Select "Preferred Cellular Network" to Manual and click on "Change" and thengo to "Internet" –"Connection"-"User Profile" and add a manual profile. You will have to give the APN according to the SIM card that you are using.

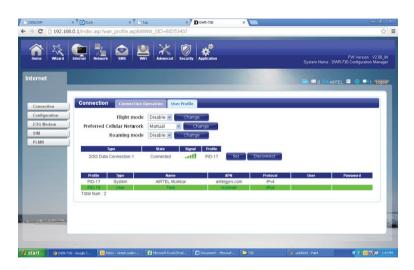



step 3 MANUAL SETTING

Now come back again to "Connection Operation" then click on the profile you have created which will appear on the list and click on "Set". Then you will be connecting to the manually created network.

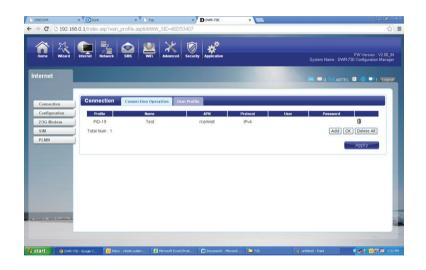



step 3 MANUAL SETTING

